

## NKAJ-0525N3, R3·G INSTRUCTION

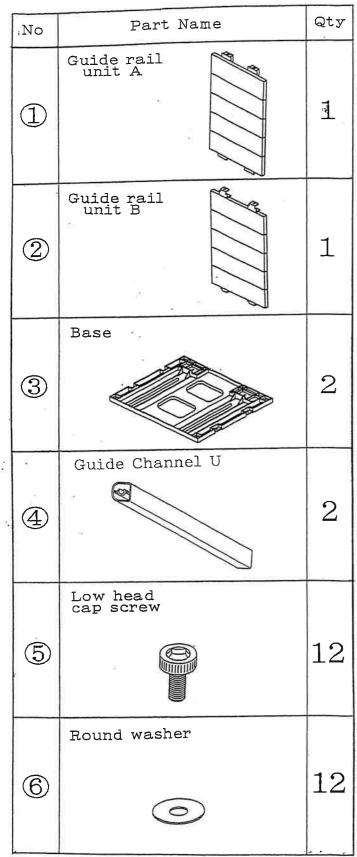

## Caution


- 1. Do not use for purposes other than PCB storage.
- 2. Do not sit or stand on unit.
- 3. Do not throw or drop unit.
- To avoid catching fingers in moving parts, always lock adjustment levers when handling

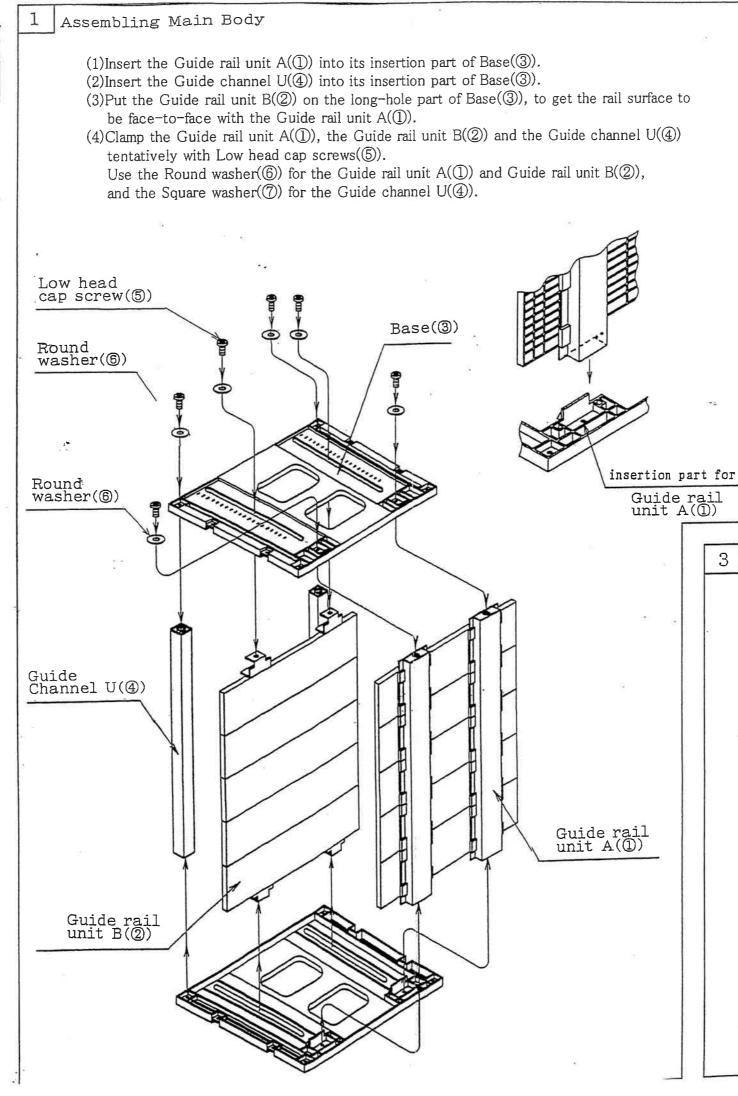


2 Main Assembly(Fixing)

(Fix the main body on a stable, flat table on the like.)

(1) Lay the rack on its side as illustrated below, and securely fix Low head cap screws(5) with the Base(3) pressed against the table. (Fix in 16 positions on the right and left sides, with 25~30kgf·cm of clamp torque.)

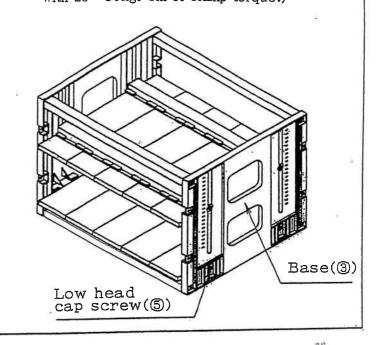

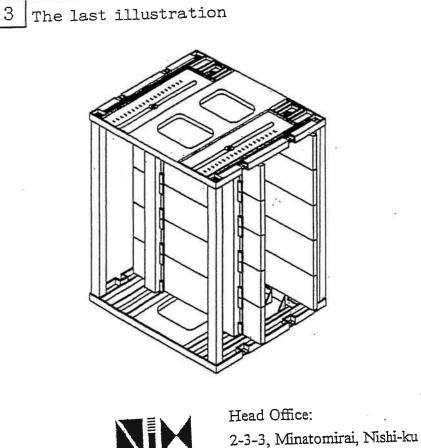

NIX,INC.

Yokohama 220-6108, Japan

TDC0007-1/1

tel. 045-221-2001

fax. 045-221-1230