


INSTRUCTION (NKAJ-0733N, R)

PARTS LIST

No	PARTS NAME	Qty	No	PARTS NAME	Qty
①	Guide rail unit A	1	⑤	Cap screw	14
②	Guide rail unit B	1	⑥	Round washer	4
③	Base	2	⑦	Rectangular washer	8
④	Guide channel Reference page 2/2 for assembly instructions	4	⑧	Nylon rivet	2


1 Assay of the base

Hold the guide rail unit B up-right and let the "RS" pins of bottom side pass through the big round holes of the bottom side base.

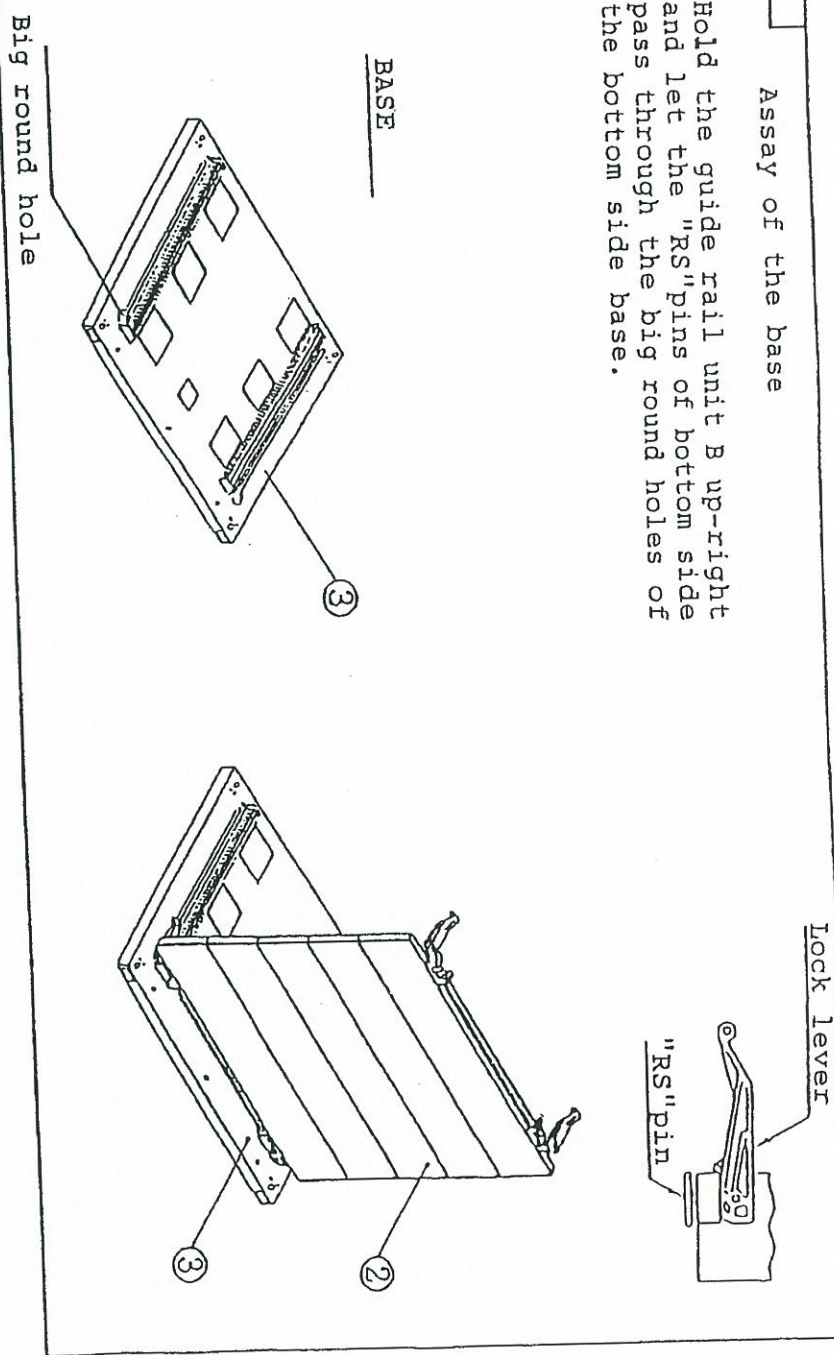

2 Assay of the base


Hold the guide rail unit B up-right keep the lock levers released and let the "RS" pin of top side pass through the big round holes of the top side of base. Slide the guide rail unit B toward the holes, then lock the levers at middle of long. At this time, corner joint must meet rack wall as illustrated on the upper right hand.

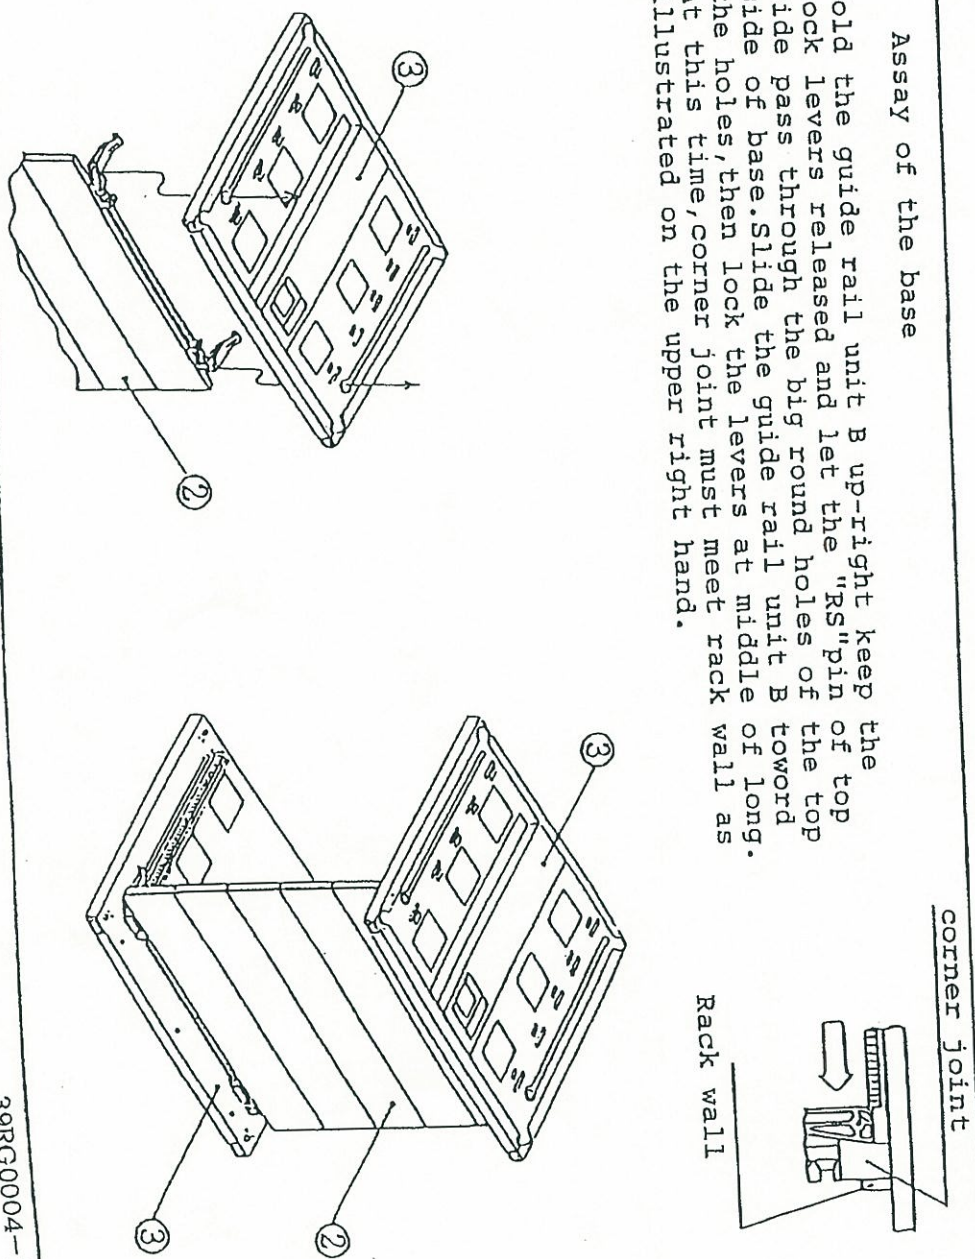

39RG0004-1/2


3 Assay the base

Then install the guide channels as illustrated. Rectangular washer are used for the corners of guide channels.

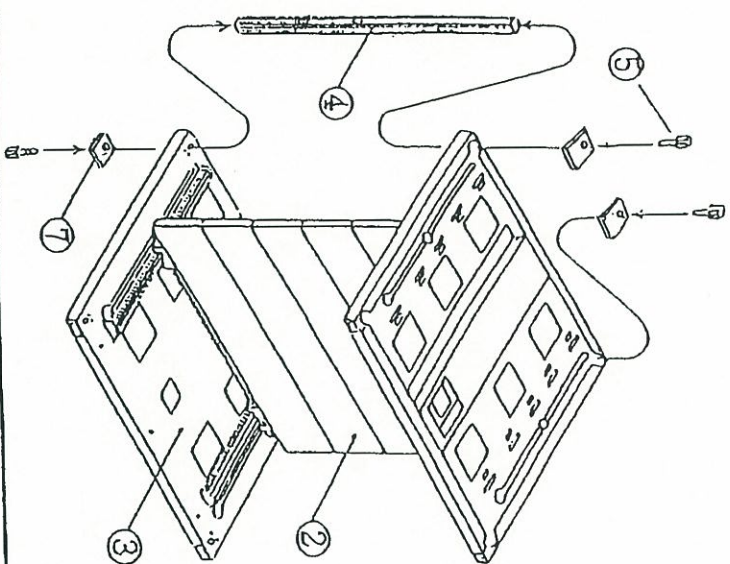


4 Phase confirmation

Release the lock levers and slide the guide rail unit B till the end of the long hole and adjust the phase of 2 bases. The corner joint must meet rack wall as illustrated.

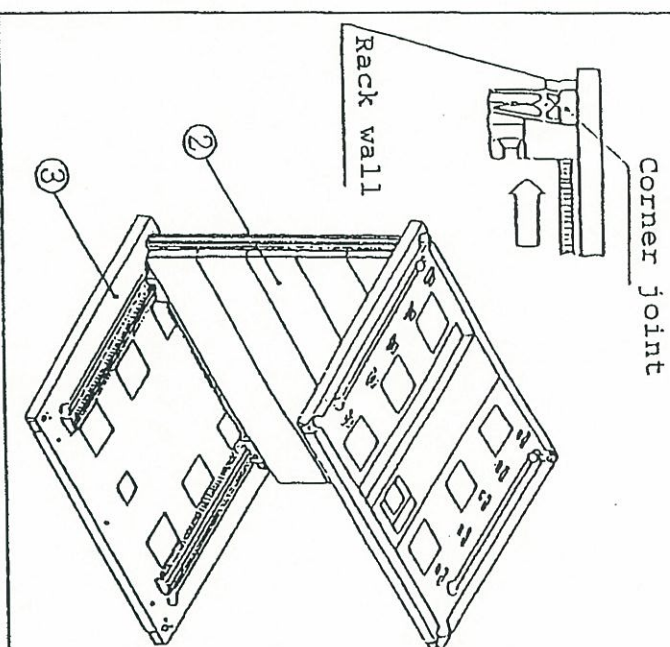


6 Install the guide channel

Then install the guide channels as illustrated. Rectangular washer are used for the corner of guide channels.

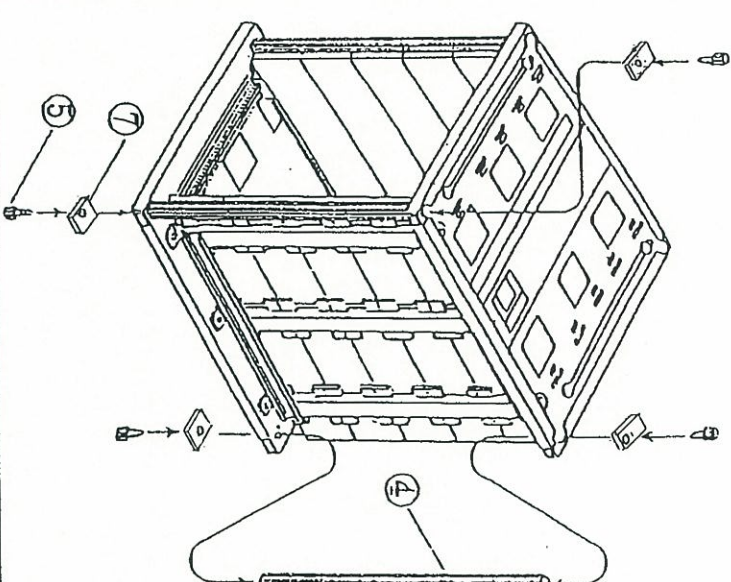

7 Final fixing


Place the lock on the flat table, and screw tight again with 8 cap screws after confirming that phases are correct.

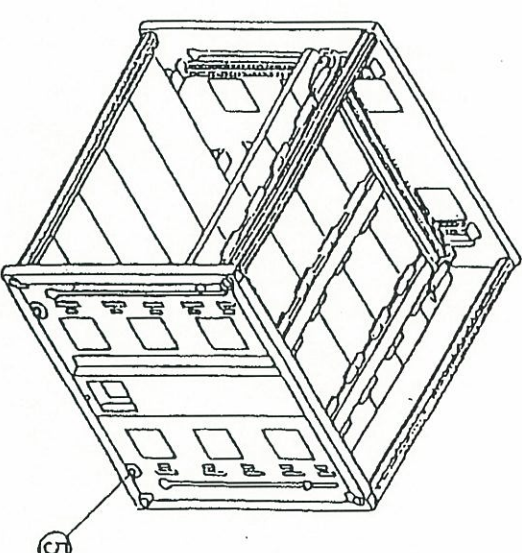



When phase discrepancy is found, restart from [4].

5 Assay of the guide rail unit

Screw up with 4 cap screws through round washer. Then, put 2 nylon rivets into holes of base as illustrated, which become stopper for guide rail unit B.

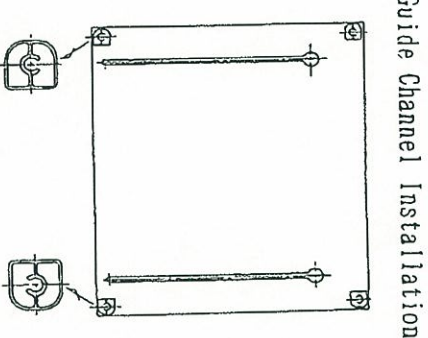

Guide Channel Installation

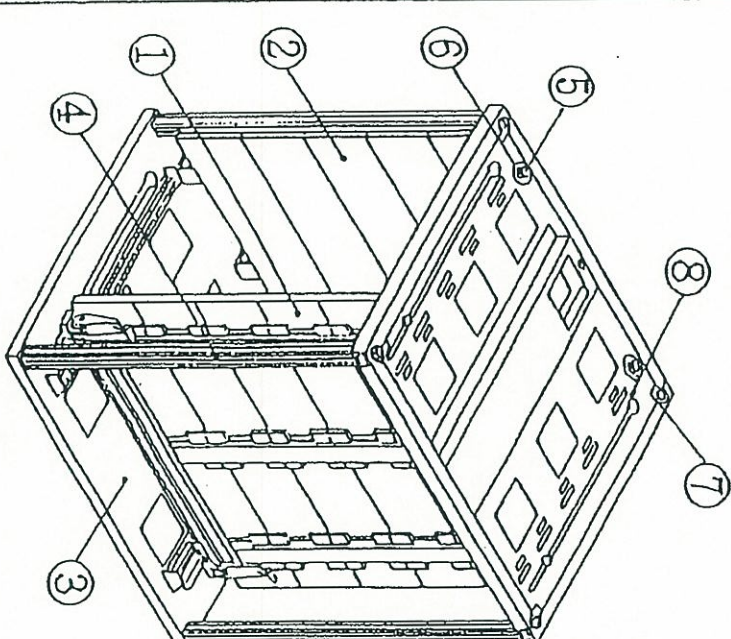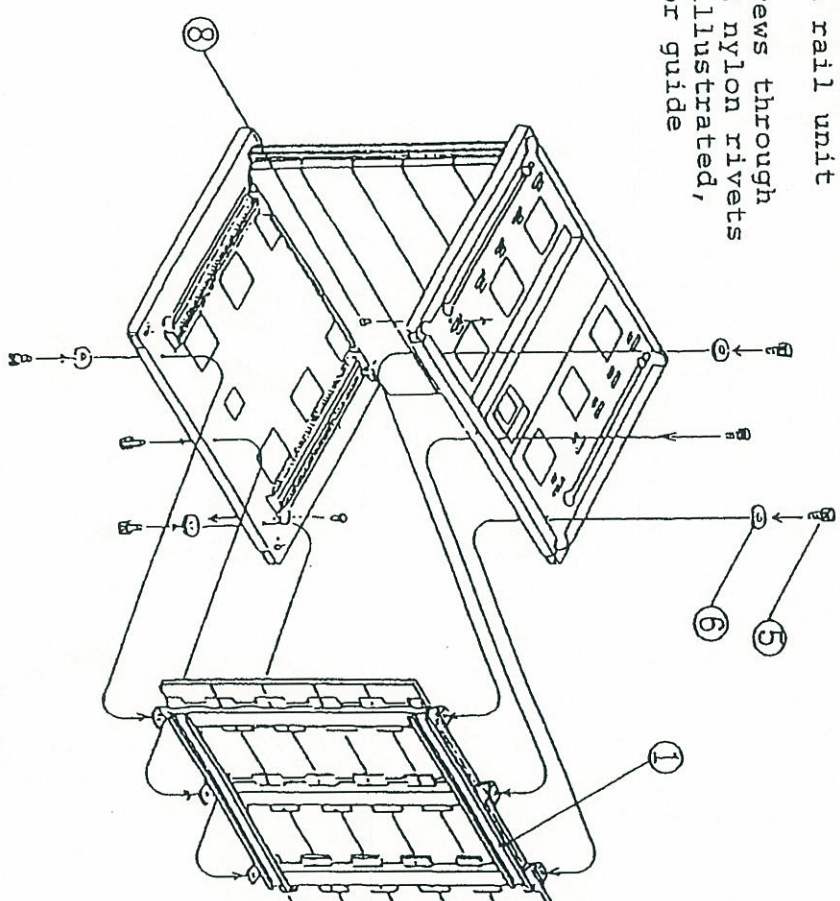

The last illustration shows where are which parts.



NIX, INC.

NIX, INC.

Head Office
Queen's Tower B 8F, 2-3-3 Minatomirai, Nishi-ku, Yokohama
220-6108, Japan
tel: 045-221-2001 (Main) fax: 045-221-1230